


reset instruction

restoring factory settings for the Wikęd Smart Door Unit

External button restore method

- Prepare a stopwatch for precise timekeeping.
- Disconnect the controller power supply. Connect the external monostable (bell) button according to the diagram below.
- Connect the power supply, then within a maximum of 30 seconds, press the button and keep it pressed for exactly 10 seconds.
- Release the button. Within the next 10 seconds, briefly press the button 5 times.
- Press the button again and keep it pressed for exactly 10 seconds. Release the button.
- Leave the device for another 10 seconds - the module will automatically restart and all settings will return to factory defaults.

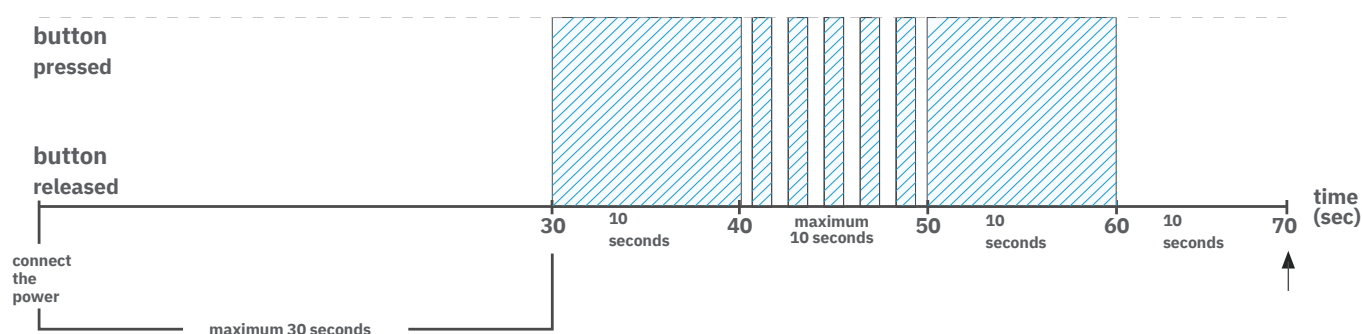

Button connection diagram for resetting the controller:

